


# Digital Imaging and Audio Lab (DIAL) INSTRUCTIONS


## **Wolverine MovieMaker Pro**

Royal Oak Public Library Makerspace

1. Turn on MovieMaker Pro.
2. Mount the reel and film. Follow the film routing diagram printed on the face of the MovieMaker Pro to route the film. We strongly recommend users follow the winding scheme to generate better quality videos.
3. Slide open the flap door; position film sprocket holds at the top. Place film underneath the 3 white tabs. Otherwise, the recorded videos will be jittery.
  - a. Place and hold film underneath Tab #1
  - b. Twist film slightly and clip film underneath Tab #2
  - c. Twist film slightly and clip film underneath Tab #3

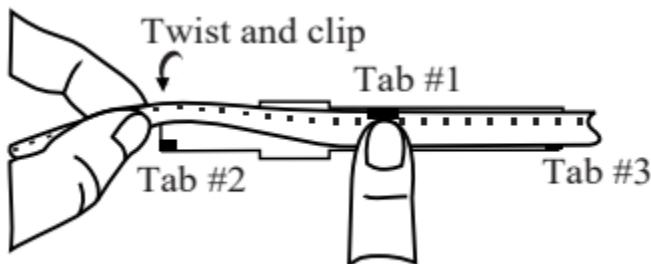

- d. Make sure the film is properly placed underneath all 3 white tabs, then close the flap door.

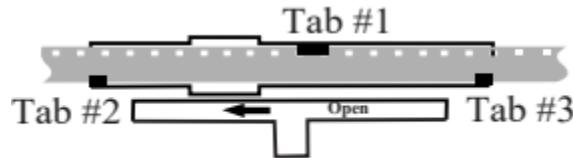

4. To record, slide the Film Selection Lever left for 8mm or right for Super 8. Then press Enter button to select your choice. Press Enter to start recording. While recording is in progress, a red dot at the upper left corner blinks. Press Enter to stop recording.
5. Plug in the USB cable to upload files to laptop and transfer to USB drive. The SD memory card is read as an External Drive, called NO\_NAME. The files are located under the directory of FilmScanner/MOVIE.

**\*NOTE: This machine does video ONLY. It will not transfer audio. \***